

Sound Devices [Included Accessories]

702	<ol style="list-style-type: none"> 1. 2000mAh Li-ion Battery [XL-B1] 2. AC power adapter [XL-WPH3] 3. 3.5mm-1/4" HP extension [XL-14] 4. C.Link cable [XL-RJ] 5. Padded case [XL-MAN] 6. Rubber Bumpers
702T	<ol style="list-style-type: none"> 1. 2000mAh Li-ion Battery [XL-B1] 2. AC power adapter [XL-WPH3] 3. 3.5mm-1/4" HP extension [XL-14] 4. C.Link cable [XL-RJ] 5. Padded case [XL-MAN] 6. FireWire power conditioner :XL-1394] 7. Rubber Bumpers
722	<ol style="list-style-type: none"> 1. 2000mAh Li-ion Battery [XL-B1] 2. AC power adapter [XL-WPH3] 3. 1/8-inch-1/4-inch HP extension [XL-14] 4. C.Link cable [XL-RJ] 5. Padded case [XL-MAN] 6. FireWire power conditioner :XL-1394] 7. Rubber Bumpers
744T	<ol style="list-style-type: none"> 1. 4600mAh Li-ion Battery [XL-B2] 2. AC power adapter [XL-WPH3] 3. 3.5mm-1/4" HP extension [XL-14] 4. C.Link cable [XL-RJ] 5. Padded case [XL-MAN] 6. FireWire power conditioner :XL-1394] 7. Rubber Bumpers
788T (788T-SSD)	<ol style="list-style-type: none"> 1. 4600mA Li-ion Battery [XL-B2] 2. AC power adapter [XL-WPH3] 3. C.Link cable [XL-RJ] 4. Padded case [CS-MAN] 5. USB-A to USB-B cable (2m length) 6. Rubber Bumpers
MixPre-D	<ol style="list-style-type: none"> 1. USB-A to USB-mini-B Cable 2. Rubber Bumpers
302	<ol style="list-style-type: none"> 1. 3.5mm-1/4" HP extension [XL-14] 2. Rubber Bumpers
633	<ol style="list-style-type: none"> 1. USB-A to USB-B Cable (2m length) 2. USB A-A conversion adapter 3. LCD protective cover 4. Rubber Bumpers
633kit	<ol style="list-style-type: none"> 1. bag by Portabrace [CS-633 (x1)] 2. audio cable [XL-2F] (x3) 3. audio cable [XL-2] (x2) 4. Lemo-BNC Timecode cable [XL-LB2] (x1) 5. 4600mA Li-ion Battery [XL-B2] (x2) 6. SD 16GB card (x1) 7. CF 16GB card (x1) 8. Rubber Bumpers

552	1. Rubber Bumpers
664	1. USB-A to USB-B Cable (2m length) 2. USB A-A conversion adapter 3. LCD protective cover 4. Rubber Bumpers
688	1. USB-A to USB-B Cable (2m length) 2. USB A-A conversion adapter 3. LCD protective Cover 4. Rubber Bumpers 5. Link Port Cover (count of 2) 6. Colored Dot stickers
USBPre2	1. USB-A to USB-B Cable(2m length) 2. Rubber Bumpers
HX-3	1. TRS interconnect cable(1/4"TSR-1/8"TSR) 2. Coaxial female power connector [XL-DC] 3. Rubber Bumpers
MM-1	1. Coaxial female power connector [XL-DC] 2. Rubber Bumpers
MP-1	1. Rubber Bumpers
	1.
CL-6	2. 10-pin ribbon cable with gasket 1. 2" Screws
CL-8	2. threadless front panel standoff (count of 2) 1.17-inch screws (count of 2)
CL-9	1. USB-A to USB-B Cable(6' (1.82m) length) 2. TRS interconnect cable(1/4"TSR-1/8"TSR, 5' length) 3. Hex wrench (1.27mm)
970	1. AC power adapter [XL-WP4] 2. 10-pin Phoenix Screw Terminal Block 3. Rubber Feet
PIX270i	1. AC power adapter [XL-WP4] 2. 10-pin Phoenix Screw Terminal Block 3. Rubber Feet
PIX250i	1. AC power adapter [XL-WP4] 2. 10-pin Phoenix Screw Terminal Block 3. Rubber Feet
PIX240i	1. AC power adapter [XL-WPH3] 2. 1/4-20 Simple Stand
PIX240i Kit	1. PIX-HC1A Case (x1) 2. [PIX-CADDY2] (x2) 3. [PIX-SSD] (x2) 4. [PIX-HOOD] (x1) 5. Battery [XL-B2] (x2) 6. [PIX-ARM] (x1) 7. AC power adapter [XL-WPH3] (x1) 8. HDMI Cable (3ft) (x1) 9. SDI Cable (3ft) (x1)

	10. 1/4-20 Simple Stand (x1)
--	------------------------------

XM-CADDY PACK	<ol style="list-style-type: none"> 1. PIX-CADDY2 (x2) 2. PIX-SSD (x2)
PIX270i Complete	<ol style="list-style-type: none"> 1. XM CADDY Pack 2. AC power adapter [XL-WP4] (x1)
PIX250i Complete	<ol style="list-style-type: none"> 1. XM CADDY Pack 2. AC power adapter [XL-WP4] (x1)
PIX240i Kit	<ol style="list-style-type: none"> 11. PIX-HC1A Case (x1) 12. [PIX-CADDY2] (x2) 13. [PIX-SSD] (x2) 14. [PIX-HOOD] (x1) 15. Battery [XL-B2] (x2) 16. [PIX-ARM] (x1) 17. AC power adapter [XL-WPH3] (x1) 18. HDMI Cable (3ft) (x1) 19. SDI Cable (3ft) (x1) 20. 1/4-20 Simple Stand (x1) 21.